



**SRT40**

**Rebar Tying Tool**

Parts Reference Guide

Guía de referencia de piezas

Pièces Guide de référence

Schematic Drawings Inside

Plano esquemático en el interior

Schéma intérieur



Kyocera Senco Europe  
Pascallaan 88  
8218 NJ Lelystad  
The Netherlands  
senco.eu


**NFE09V2 • July 4 2022 (replaces 31/04/2022)**

© 2022 by Kyocera Senco Europe

Tool Model

9VS2002N SRT40 EU  
9VS7002N SRT40 UK\*

\*SRT40 UK incl. UK plug adapter # EBA22071 not shown

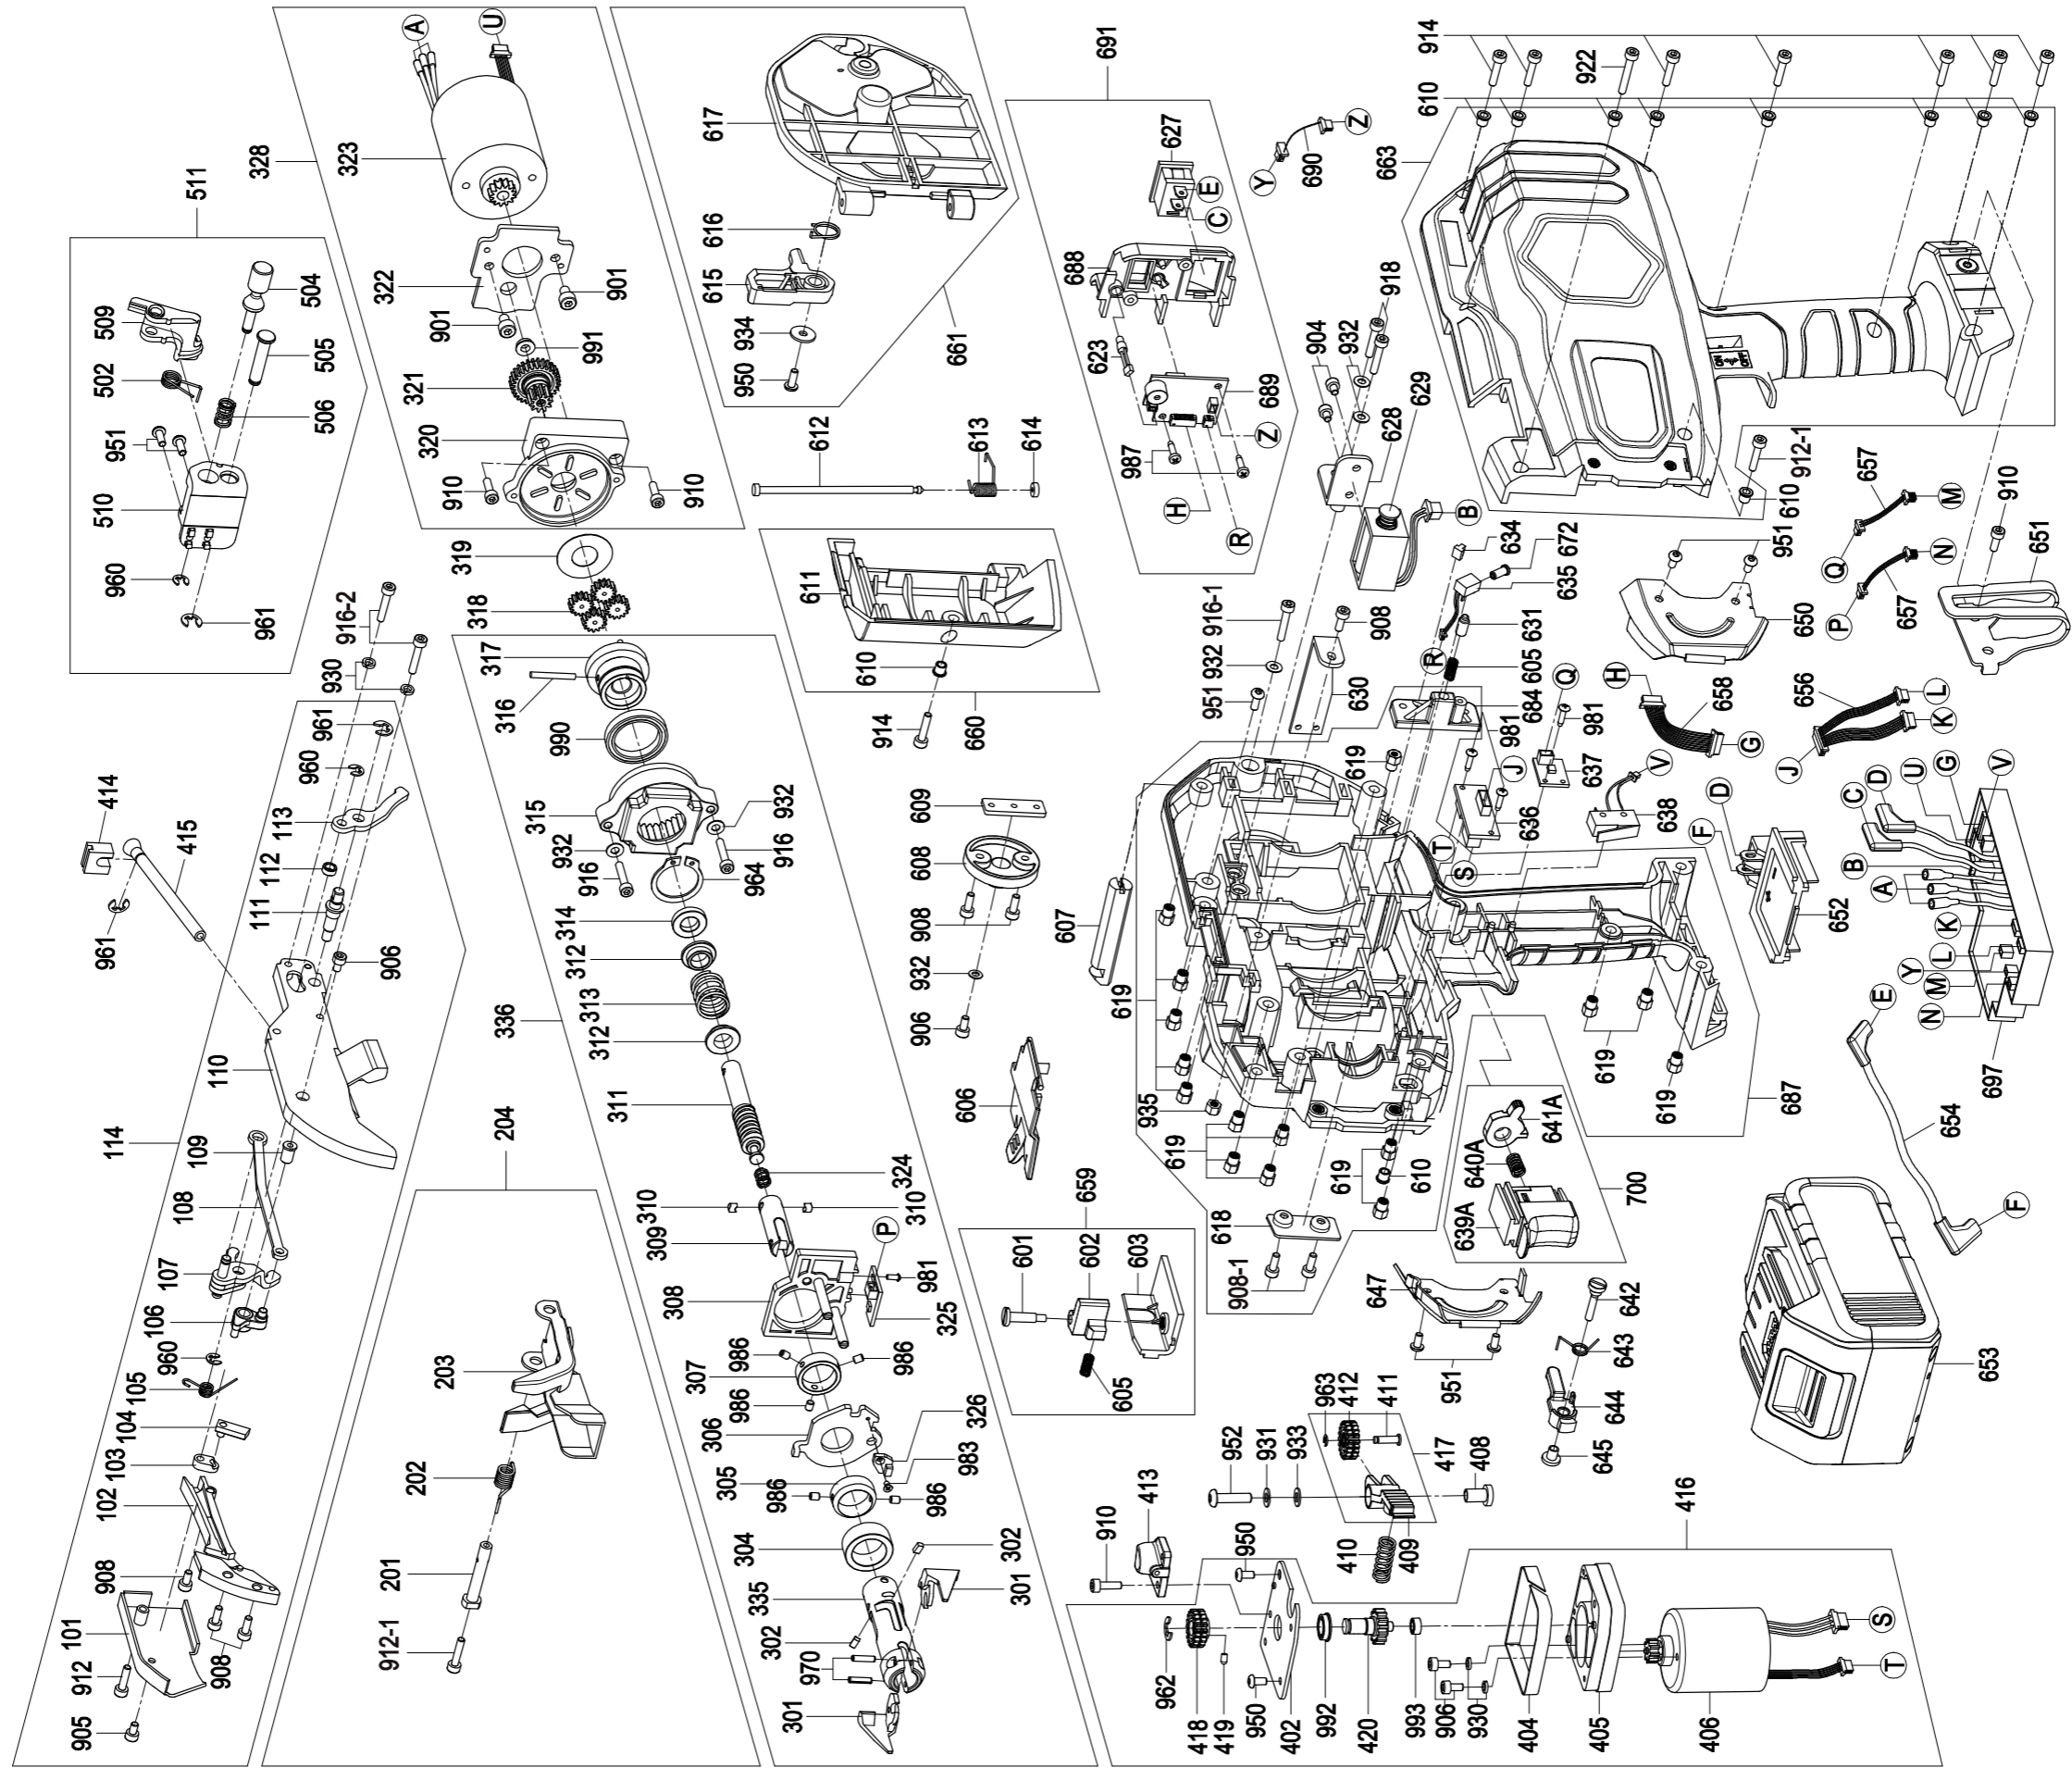



# Rebar Tying Tool

# SRT40

## REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • ERSATSTEILE-LISTE • LISTE DE PIÈCES DE RECHANGE

ITEM NO.	PART NO.	DESCRIPTION
101	81013SRT	Arm A
102	81020SRT	Wire Guide A
103	11072SRT	Connecting Plate 1
104	81044SRT	Fixed Cutter
105	81051SRT	Torsion Spring 1
106	81068SRT	Cutter
107	80175SRT	Cutter Lever A
108	81082SRT	Connecting Rod 1
109	81099SRT	Cutter Sleeve
110	81105SRT	Arm A unit
111	81112SRT	Shaft Screw
112	81129SRT	Washer 4
113	81136SRT	Cutter Lever C
114	81143SRT	Arm A Unit Assy
201	82010SRT	Stopper Shaft
202	82027SRT	Torsion Spring 3
203	82034SRT	Curly Guide
204	82041SRT	Curly Guide Assy
301	83017SRT	Hook
302	83024SRT	Key A
304	83048SRT	Sleeve Guide
305	83055SRT	Cutting Ring Guide
306	83062SRT	Cutting Plate
307	83079SRT	Cutting Ring Washer
308	13069SRT	Tip Axis Guide Assy
309	83093SRT	Tip Axis B
310	13120SRT	Key B
311	83116SRT	Tip Axis A
312	83123SRT	Pin 1
313	13168SRT	Comp. Spring 2
314	83147SRT	Bumper
315	83154SRT	Internal Gear
316	13229SRT	Pin 5
317	83178SRT	Planet Gear Unit
318	13236SRT	Planet Gear
319	13243SRT	Gear Press Wheel
320	83208SRT	Twisting Motor Gearbox
321	83215SRT	Sun Gear Unit
322	83222SRT	Motor Fixing plate
323	83239SRT	Twisting Motor Unit
324	13137SRT	Comp. Spring 1
325	13311SRT	Route PWB Unit
326	13304SRT	Magnetic Plate
328	83284SRT	Twisting Motor Assy
335	83352SRT	Sleeve A
336	83369SRT	Twister Assy
402	84021SRT	Partition Plate
404	84045SRT	Dust-Proof strip
405	84052SRT	Feeding Motor Gearbox
406	84069SRT	Feeding Motor Unit
408	84083SRT	Hollow Pin 1
409	14028SRT	Release Lever
410	14035SRT	Comp. Spring 3
411	14158SRT	Step Pin 1
412	14141SRT	Feeding Gear B2
413	84137SRT	Wire Guide C
414	84144SRT	Rubber Base
415	84151SRT	Pipe
416	84168SRT	Feeding Motor Assy
417	14165SRT	Release Lever Assy
418	84175SRT	Feeding Gear B1
419	84182SRT	Pin 7
420	84199SRT	Feeding Gear Shaft
502	12499SRT	Torsion Spring 7
504	85042SRT	Reel Press limit Axis
505	12482SRT	Reel Press Centre Axis
506	12468SRT	Comp. Spring 7
509		Reel Press A
510		Reel Press D
511	85110SRT	Brake Housing Assy
601	86018SRT	Step Pin 2
602	86025SASRT	Release Stopper
603	86032SRT	Reel Stopper
605	17166SRT	Comp. Spring 4
606	86063SRT	Window
607	86070SRT	Joint Reel Magazine
608	17029SRT	Reel Guide

ITEM NO.	PART NO.	DESCRIPTION
609	17210SRT	Fixing Plate 1
610	18040SRT	Hollow Pin 7
611	86117SASRT	Motor Cover
612	86124SRT	Step Pin 3
613	15049SRT	Torsion Spring 5
614	15056SRT	Rubber Washer
615	86155SASRT	Reel Stopper
616	86162SRT	Torsion Spring 6
617	86179SRT	Reel Stay
618	86186SRT	Strength Plate
619	17111SRT	Nut M3
623	16046SRT	LED Unit
627	16015SRT	Main Switch Unit
628	86285SRT	Solenoid Holder
629	86292SRT	Solenoid
630	86308SRT	Fixing Plate 2
631	86315SRT	Jaw Pin
634	86346SRT	Socket Cap
635	86353SRT	Socket
636	86360SRT	Feeding PWB unit
637	17326SRT	Sensor PWB D Unit
638	17265SRT	Trigger Switch
639	86391SASRT	Trigger
640	86407SRT	Comp. Spring 5
641	86414SASRT	Trigger Lock
642	17517SRT	Bolt
643	86438SRT	Torsion Spring 4
644	86445SRT	Switch Lever
645	17364SRT	Pin 4
647	86476SRT	Cover L Unit
650	86506SRT	Cover P Unit
651	86513SRT	Belt Hook
652	86520SRT	Electrode Unit
653	86537SASRT	18V Li-ion Battery
654	86544SRT	Battery Connecting Wire
656	86568SRT	Feeding Motor Connecting Wire
657	86575SRT	Sensor Connecting Wire
658	86582SRT	Adjusting Connecting Wire
659	86599SASRT	Reel Stopper Assy
660	86605SASRT	Motor Cover Assy
661	86612SASRT	Reel Stay Assy
663	86636SASRT	Frame R Assy
672	86704SRT	Plastic cap
684	86841SRT	Jaw
687	86872SASRT	Frame L Assy (incl. Jaw)
688	86889SRT	DD Adjusting Plate
689	86896SRT	Adjusting PWB Unit
690	86902SRT	DD Screen Connecting Wire
691	86919SRT	Main Switch Base Assy
697	86971SRT	Main PWB Unit
901	89019SRT	Hex Bolt M4X6
904	12536SRT	Hex Bolt M3X4
905	89057SRT	Hex Bolt M3x5
906	11034SRT	Hex Bolt M3x6
908-1	12024-1SRT	Hex Bolt M3x8(With thread lock)
910	11225SRT	Hex Bolt M3x10
912-2	11027-2SRT	Hex Bolt M3x12(with thread lock)
914	17449SRT	Hex Bolt M3x14
916	17487SRT	Hex Bolt M3x16
916-1	17487-1SRT	Hex Bolt M3x16(SS)
916-2	17487-2SRT	Hex Bolt M3x16(with thread lock)
922	89224SRT	Hex Bolt M3x22
930	12178SRT	Spring Washer φ3
931	14219SRT	Spring Washer φ4
932	14058SRT	Washer
933	14226SRT	Washer 2
934	15070SRT	Washer 3
935	17050SRT	Nut M3 (T4)
950	89507SRT	Button Head Screw M3X6
951	17128SRT	Button Head Screw M3X8
952	89521SRT	Button Head Screw M4X20
960	12543SRT	E-ring 3
961	11133SRT	E-ring 4
962	89620SRT	E-ring 5
963	12048SRT	E-Ring 2
964	13182SRT	C-ring 20
970	13342SRT	Spring Pin φ2.5

ITEM NO.	PART NO.	DESCRIPTION
981	13328SRT	Pan-head Screw ST2.2x6
983	13298SRT	Countersunk screw M2x4
986	89866SRT	Hex Screw M3x3
987	89873SRT	Pan-head Screw ST3x
990	13205SRT	Bearing 1
991	89910SRT	Bearing 2
992	89927SRT	Bearing 3
993	89934SRT	Bearing 4
986	89866SRT	Hex Screw M3x3
990	13205SRT	Bearing 1
991	89910SRT	Bearing 2
992	89927SRT	Bearing 3
993	89934SRT	Bearing 4