


Parts Reference Guide
Bauteilübersicht
Pièces Guide de référence
Guía de referencia de piezas

Schematic Drawings Inside
Schemazeichnung innen
Schéma intérieur
Plano esquemático en el interior

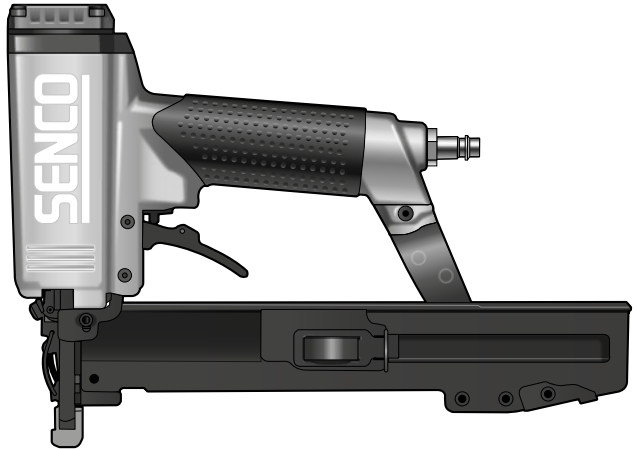

Repair Kit
YK0372


SENCO®

| Model | A | B | C | D | E | F | G | H |
|----------------|---------|---------------------|--------|--------|--------|--------|--------|--------|
| 492026N CA/SSA | K06-K14 | EA0078 | BF0129 | BF0210 | HB0232 | HF0028 | FC0363 | FC0250 |
| 492023N CA/SSA | L06-L17 | EA0077 | - | BF0210 | HB0232 | HF0028 | FC0359 | FC0233 |
| 492023N CA/SSA | L06-L17 | EA0077 | - | BF0210 | HB0232 | HF0028 | FC0359 | FC0233 |
| 492024N CA/SSA | M06-M17 | EA0078 | - | BF0211 | HB0233 | HF0029 | FC0359 | FC0251 |
| 492024N CA/SSA | M06-M17 | EA0287_040" Shorter | - | BF0211 | HB0233 | HF0029 | FC0359 | FC0251 |
| 492024N CA/SSA | M06-M17 | EA0078 | - | BF0211 | HB0233 | HF0029 | FC0359 | FC0251 |
| 492024N CA/SSA | M06-M17 | EA0287_040" Shorter | - | BF0211 | HB0233 | HF0029 | FC0359 | FC0251 |
| 492026N CA/SSA | K06-K14 | EA0078 | BF0129 | BF0210 | HB0232 | HF0028 | FC0363 | FC0250 |

| EU | A | I | J | K | L | M | N | O | P |
|----------------|---------|--------|--------|--------|--------|--------|--------|--------|--------|
| 492026N CA/SSA | K06-K14 | GC0599 | GC0564 | FA0164 | - | GC0568 | KB0017 | GC0578 | - |
| 492023N CA/SSA | L06-L17 | GC0566 | GC0564 | FA0161 | - | GC0568 | KB0017 | GC0565 | - |
| 492023N CA/SSA | L06-L17 | GC0566 | GC0564 | FA0161 | - | GC0568 | KB0017 | GC0565 | - |
| 492024N CA/SSA | M06-M17 | GC0566 | GC0581 | GC0572 | FC0283 | GC0586 | KB3265 | GC0579 | GC0619 |
| 492024N CA/SSA | M06-M17 | GC0566 | GC0581 | GC0572 | FC0283 | GC0586 | KB3265 | GC0579 | GC0619 |
| 492026N CA/SSA | K06-K14 | GC0566 | GC0564 | FA0164 | - | GC0568 | KB0017 | GC0578 | - |

SSA - Single Sequential Actuation
CA - Contact Actuation


= Contents of YK0372 Kit

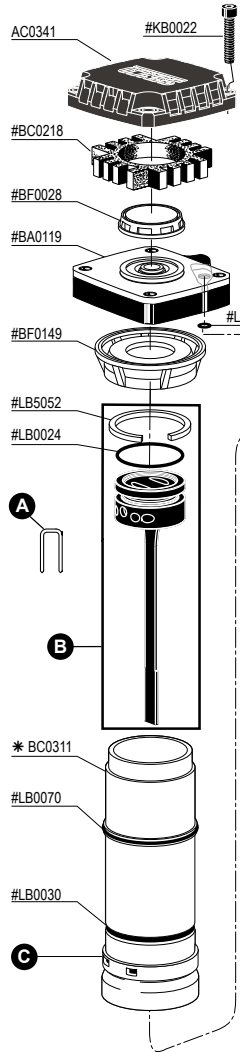

* Does Not Include O-rings
* No incluye sellos de gomas
* Joints exclus

Available Triggers

| | |
|------------------------------------|--------|
| HC0335 | KB3495 |
| HC0217 | HF0024 |
| Contact Actuation HA0087 | |
| KB4130 | HC0053 |
| KB3495 | KB3495 |
| HC0193 | KB4211 |
| KB4131 | KB4131 |
| Single Sequential Actuation HA0086 | |

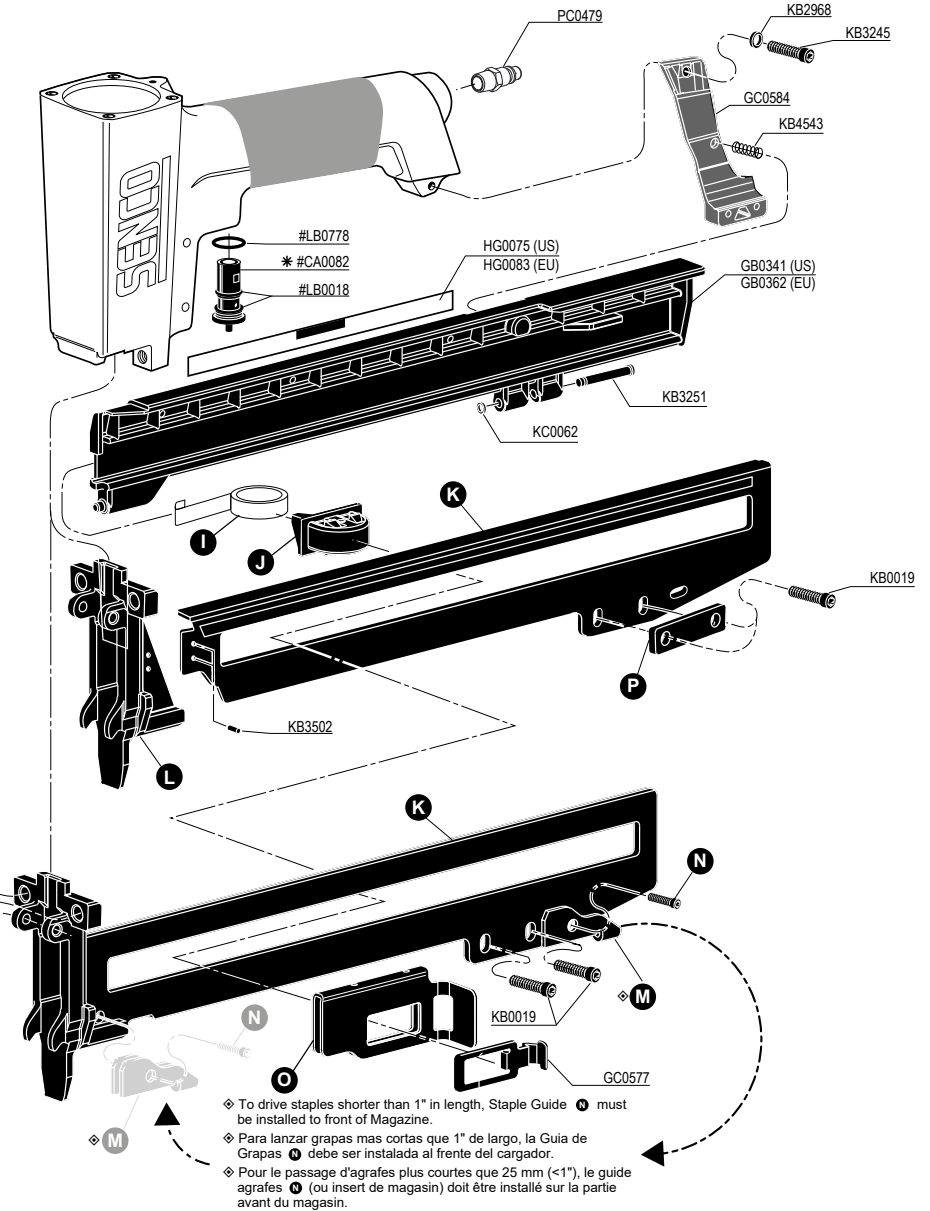

◆ To drive staples shorter than 1" in length, Staple Guide **N** must be installed to front of Magazine.
◆ Para lanzar grapas mas cortas que 1" de largo, la Guia de Grapas **N** debe ser instalada al frente del cargador.
◆ Pour le passage d'agrafes plus courtes que 25 mm (<1"), le guide agrafes **N** (ou insert de magasin) doit être installé sur la partie avant du magasin.



REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • ERSATZTEILE-LISTE • LISTE DE PIÈCES DE RECHANGE

| PART NO. | DESCRIPTION | DESCRIPCIÓN | BESCHREIBUNG | DESCRIPTION |
|----------|------------------|---------------------|--------------|----------------------|
| AC0222 | Mainbody Tube | Cilindro | | Cylindre |
| AC0341 | Deflector | Desviador | | Déflecteur |
| BA0119 | Valve Assembly | Asamble De Válvula | | Valve D'assemblée |
| BB0175 | Stop | Tope | | Arrêt |
| BC0218 | Muffler | Silenciador | | Silencieux |
| BC0311 | Cylinder | Cilindro | | Cylindre |
| BF0028 | Seal | Sello | | Joint |
| BF0129 | Ring | Anillo | | Anneau |
| BF0149 | Retainer | Junta Tórica | | Retenue |
| BF0210 | Seal | Sello | | Joint |
| BF0211 | Seal | Sello | | Joint |
| CA0062 | Valve Assembly | Asamible De Válvula | | Valve D'assemblée |
| EA0076 | Piston Assembly | Asamble De Piston | | Piston D'assemblée |
| EA0077 | Piston Assembly | Asamble De Piston | | Piston D'assemblée |
| EA0078 | Piston Assembly | Asamble De Piston | | Piston D'assemblée |
| EA0108 | Piston Assembly | Asamble De Piston | | Piston D'assemblée |
| EA0109 | Piston Assembly | Asamble De Piston | | Piston D'assemblée |
| EA0287 | Piston Assembly | Asamble De Piston | | Piston D'assemblée |
| FA0159 | Latch | Ufeta | | Doigt De Retenue |
| FA0161 | Rail Assembly | Asamble De Carril | | Rail D'assemblée |
| FA0163 | Rail Assembly | Asamble De Carril | | Rail D'assemblée |
| FA0164 | Rail Assembly | Asamble De Carril | | Rail D'assemblée |
| FC0233 | Door | Puerta | | Porte |
| FC0250 | Door | Puerta | | Porte |
| FC0251 | Door | Puerta | | Porte |
| FC0283 | Plate | Placa | | Plaque |
| FC0349 | Door | Puerta | | Porte |
| FC0359 | Plate | Placa | | Plaque |
| FC0363 | Plate | Placa | | Plaque |
| GB0362 | Door (EU) | Puerta | | Porte |
| GC0564 | Cover | Placa | | Bouchier Antiabrasif |
| GC0565 | Feeder Shoe | Alimentador | | Poussoir |
| GC0566 | Spring | Muelle | | R ressort |
| GC0568 | Guide | Guia | | Guide |
| GC0572 | Rail | Carril | | Rail |
| GC0577 | Latch | Ufeta | | Doigt De Retenue |
| GC0579 | Feeder Shoe | Alimentador | | Poussoir |
| GC0581 | Cover | Placa | | Bouchier Antiabrasif |
| GC0584 | Support | Soporte | | Support |
| GC0586 | Guide | Guia | | Guide |
| GC0594 | Feeder Shoe | Alimentador | | Poussoir |
| GC0599 | Spring | Muelle | | R ressort |
| GC0619 | Plate | Placa | | Plaque |
| HA0086 | Trigger Assembly | Asamble De Gatillo | | Gâchette D'assemblée |
| HA0087 | Trigger Assembly | Asamble De Gatillo | | Gâchette D'assemblée |
| HB0232 | Safety Element | Seguro | | Palpeur De Sécurité |
| HB0233 | Safety Element | Seguro | | Palpeur De Sécurité |
| HC0053 | Trigger | Gatillo | | Gâchette |
| HC0192 | Safety Element | Seguro | | Palpeur De Sécurité |
| HC0193 | Guide | Guia | | Guide |
| HC0217 | Guide | Guia | | Guide |
| HC0335 | Trigger | Gatillo | | Gâchette |
| HF0024 | Trigger | Gatillo | | Gâchette |
| HF0028 | Cushion | Amortiguador | | Coussin |
| HF0029 | Cushion | Amortiguador | | Coussin |
| HG0083 | Label (EU) | Etiqueta | | Etiquette |
| KB0016 | Screw | Tornillo | | Vis |
| KB0017 | Screw | Tornillo | | Vis |
| KB0019 | Screw | Tornillo | | Vis |
| KB0022 | Screw | Tornillo | | Vis |
| KB0043 | Screw | Tornillo | | Vis |
| KB2968 | Washer | Arandela | | Rondelle |
| KB3225 | Pin | Pasador | | Goupille |
| KB3239 | Pin | Pasador | | Goupille |
| KB3245 | Screw | Tornillo | | Vis |
| KB3251 | Retainer | Junta Tórica | | Retenue |
| KB3265 | Screw | Tornillo | | Vis |
| KB3495 | Pin | Pasador | | Goupille |
| KB3502 | Pin | Pasador | | Goupille |
| KB4130 | Spring | Muelle | | R ressort |
| KB4131 | Spring | Muelle | | R ressort |
| KB4211 | Spring | Muelle | | R ressort |
| KB4543 | Spring | Muelle | | R ressort |
| KC0062 | Retainer | Junta Tórica | | Retenue |
| KC0069 | Pin | Pasador | | Goupille |
| LB0012 | Seal | Sello | | Joint |
| LB0018 | Seal | Sello | | Joint |
| LB0024 | Seal | Sello | | Joint |
| LB0030 | Seal | Sello | | Joint |
| LB0070 | Seal | Sello | | Joint |
| LB0778 | Seal | Sello | | Joint |
| LB5052 | Seal | Sello | | Joint |
| PC0479 | Air Fitting | Conexión De Aire | | Raccord Air |